


# ASSEMBLY INSTRUCTIONS


## Deluxe Standing Art Easel

Before you begin assembly, make sure that you have all the parts listed below. Please use the (L) Allen wrench for assembly.


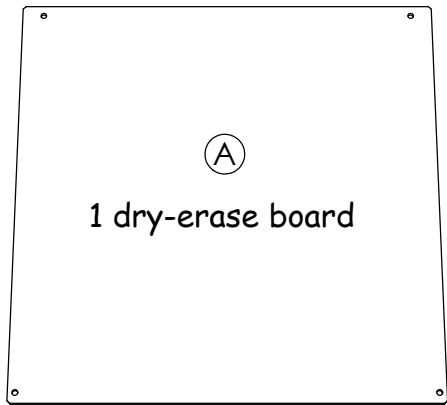


1 dry-erase board

2 upper hinged legs

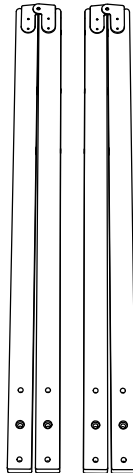


4 lower legs

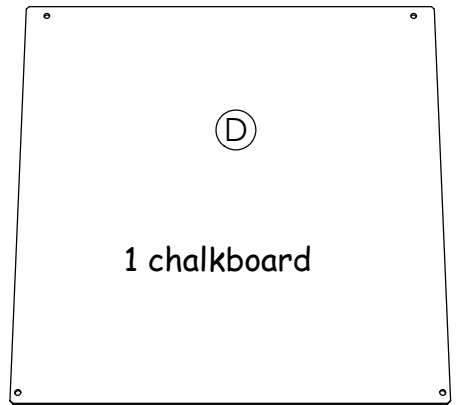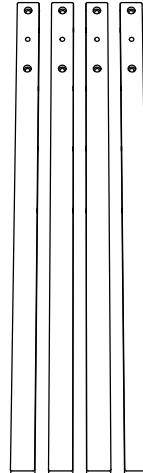

1 chalkboard

 
1 paper guide/cutter




1 upper art board frame with logo



 
2 lower art board frames




2 leg braces

 


1 paper roll dowel

 

20 short screws

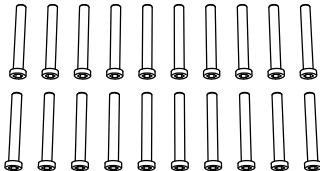

6 long screws

 


1 Allen wrench



26 plastic knobs




 4 plastic clips



Please note that some hardware may be supplied with extra pieces.

1 blue plastic tray

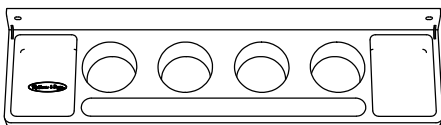

1 red plastic tray





We care about your comments. Please call us!

1-800-284-3948

# Deluxe Standing Art Easel

## STEP 1

Assemble the upper legs(B) to the lower legs(C) as follows:  
Use 8 Short Screws(J) and 8 colored knobs(M) for this step  
to make the two identical leg assemblies as shown below.

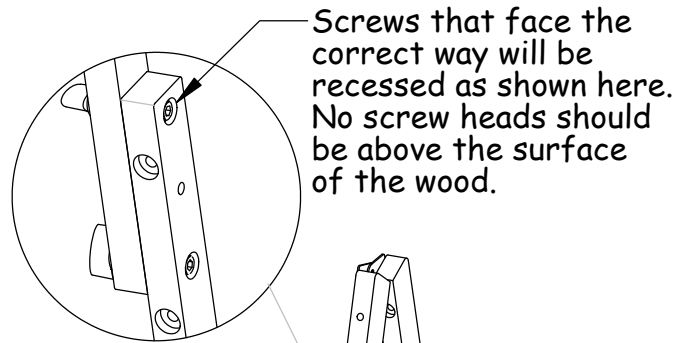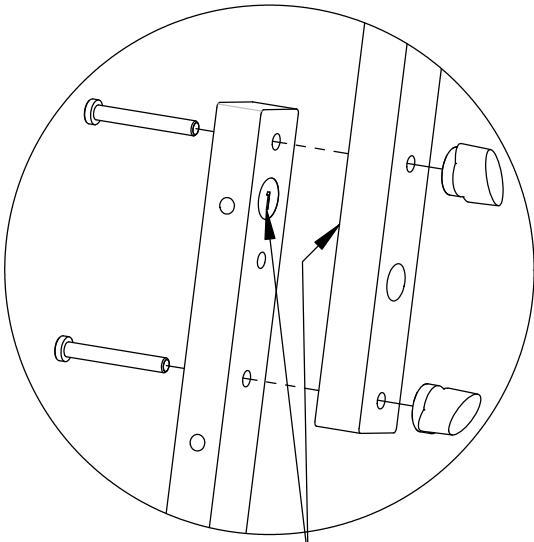

**NOTE:** The numbers on the upper legs and the lower legs should face each other for proper assembly.

Match the #1 on the upper leg to the #1 on the lower leg.

Do the same for the #2 on the upper and lower legs.

Parts needed for this step:


- 2-Upper Leg Assemblies(B)
- 4-Lower Legs(C)
- 8-Short Screws(J)
- 8-Plastic Knobs(M)

Tighten all screws and knobs using the supplied Allen Wrench (L)

# Deluxe Standing Art Easel

## STEP 2


Assemble 2 Leg Braces(H) to the sides of the legs as shown below. Use 4 Long Screws(K) and 4 colored Knobs(M) for this step.

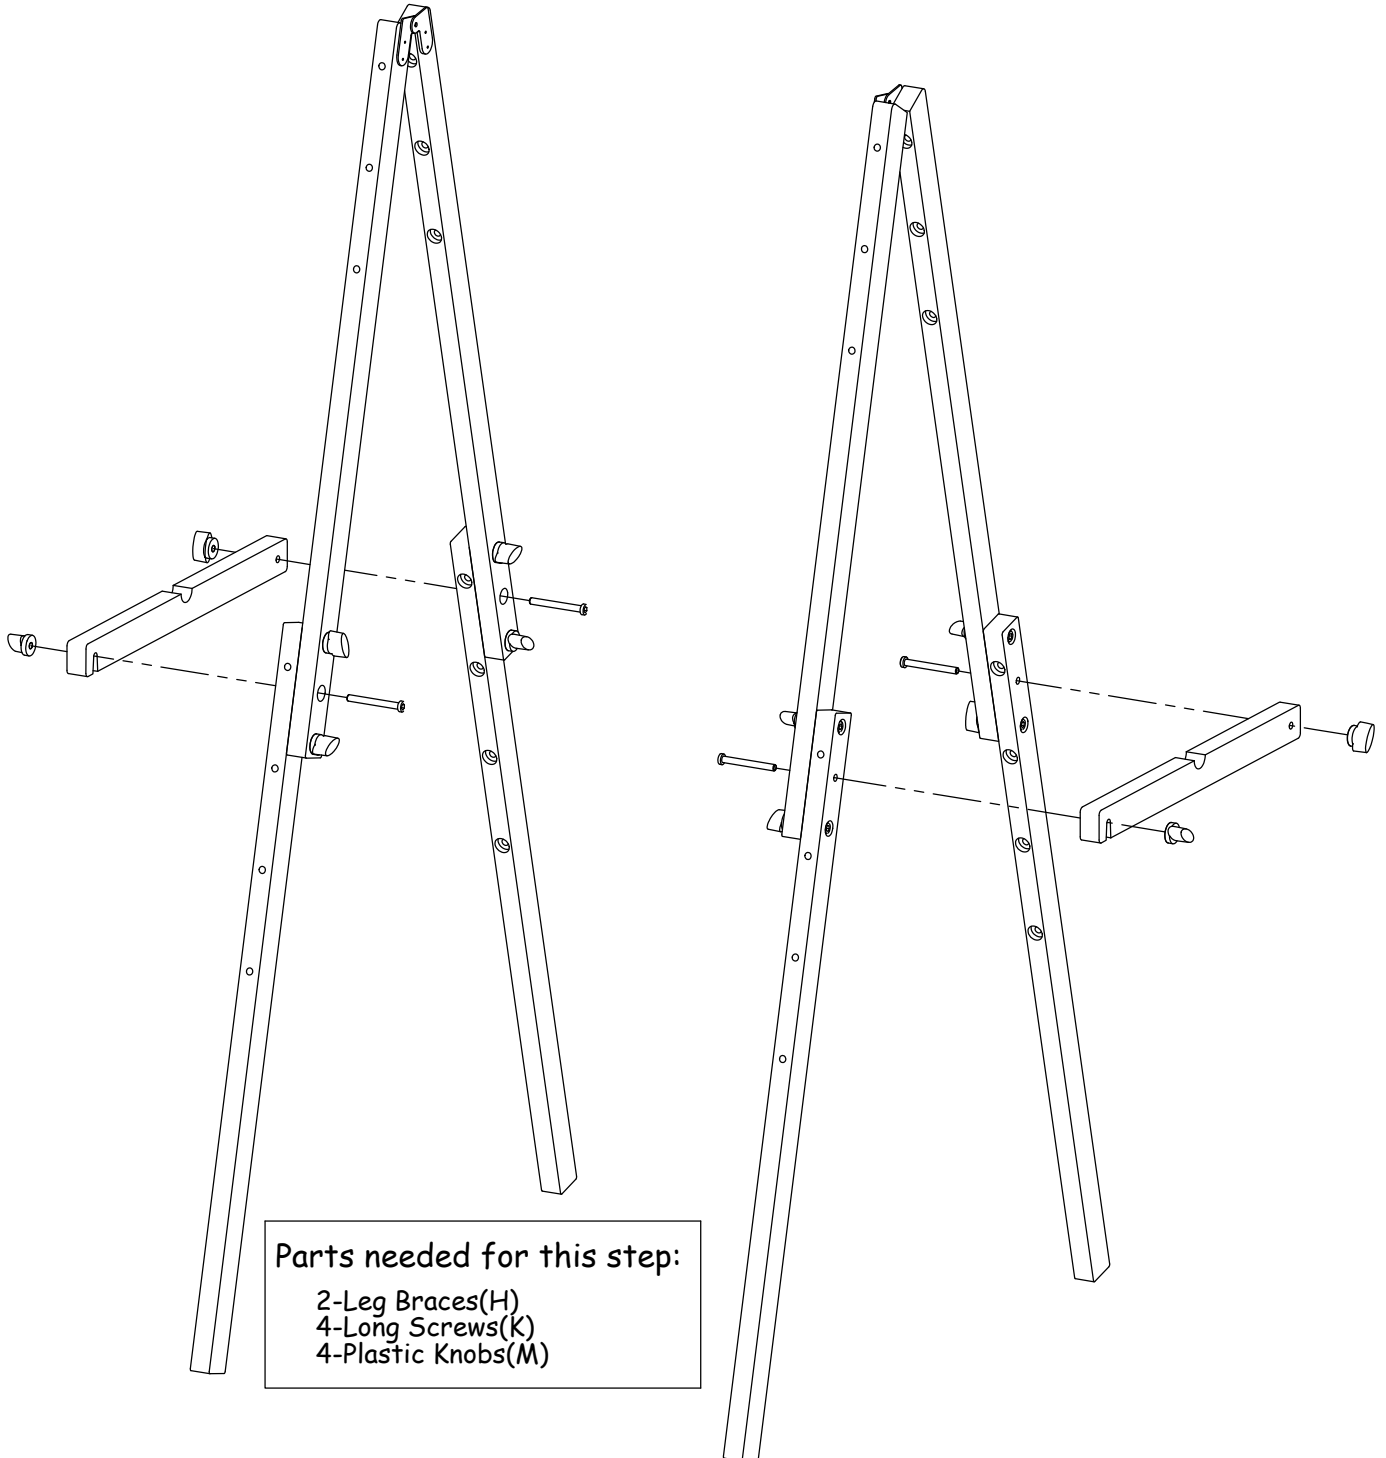

# Deluxe Standing Art Easel


## STEP 3

Using the Height Suggestions on the following page, assemble the White Dry Erase board as follows:  
With the Hinges facing each other, assemble the White Dry Erase board to the two leg assemblies as shown below. Note that **Long** Screws go at the top, and Short Screws at the bottom.

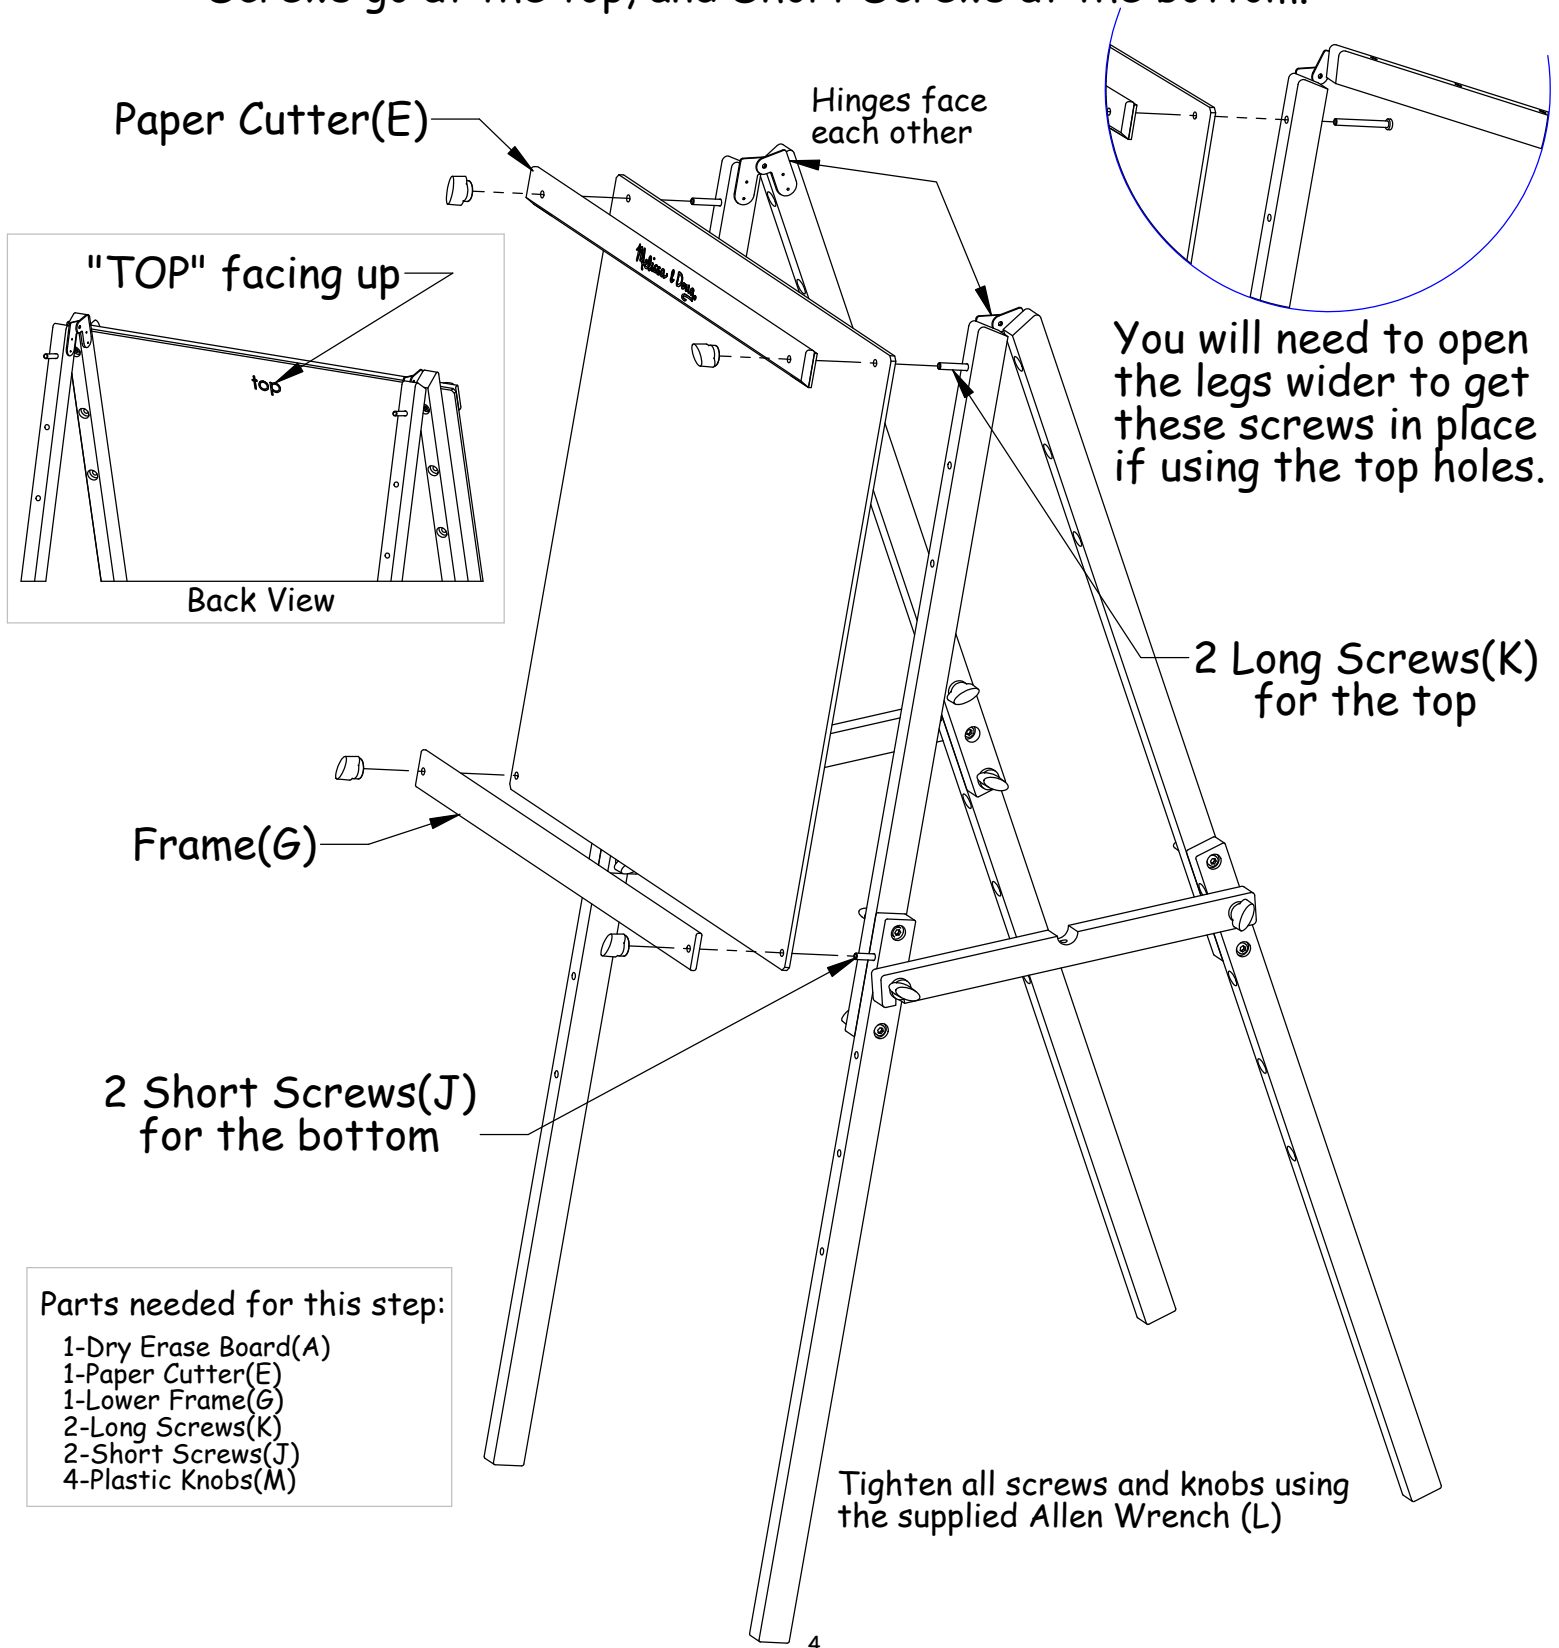

# Deluxe Standing Art Easel

## HEIGHT SUGGESTIONS

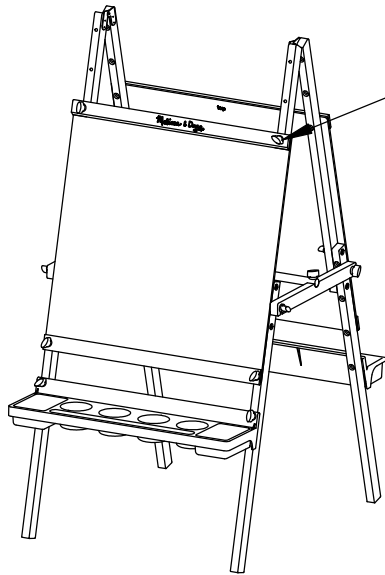


Choose the 3rd hole  
from the top

Height Position 1 -

Child's Height= Less than 40 inches

Typical Age = 3 to 4 years

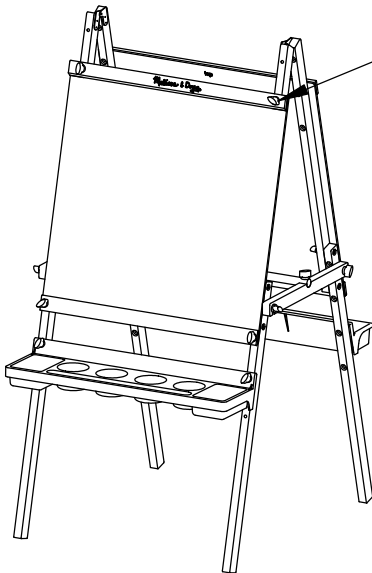


Choose the 2nd hole  
from the top

Height Position 2 -

Child's Height= Between 40 to 48 inches

Typical Age = 5 to 6 years

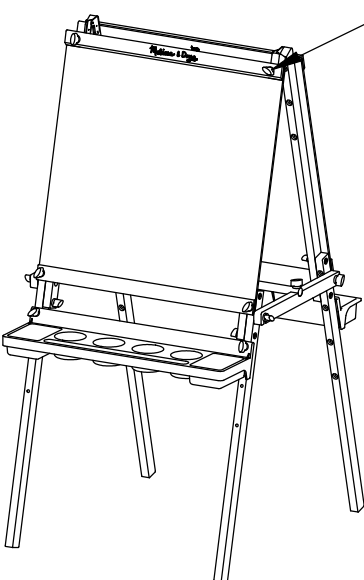

Choose the top hole

Height Position 3 -


Child's Height= From 48 inches and up

Typical Age = 7 years and up

# Deluxe Standing Art Easel

## STEP 4


Using 4 Short Screws(J) and 4 colored knobs(M), attach the Green Chalkboard and frames as shown. Use the suggested Heights from page 5 for the proper hole locations. Remember, you will need to open the legs wider to get the screws into the top position if using Height Position #3.

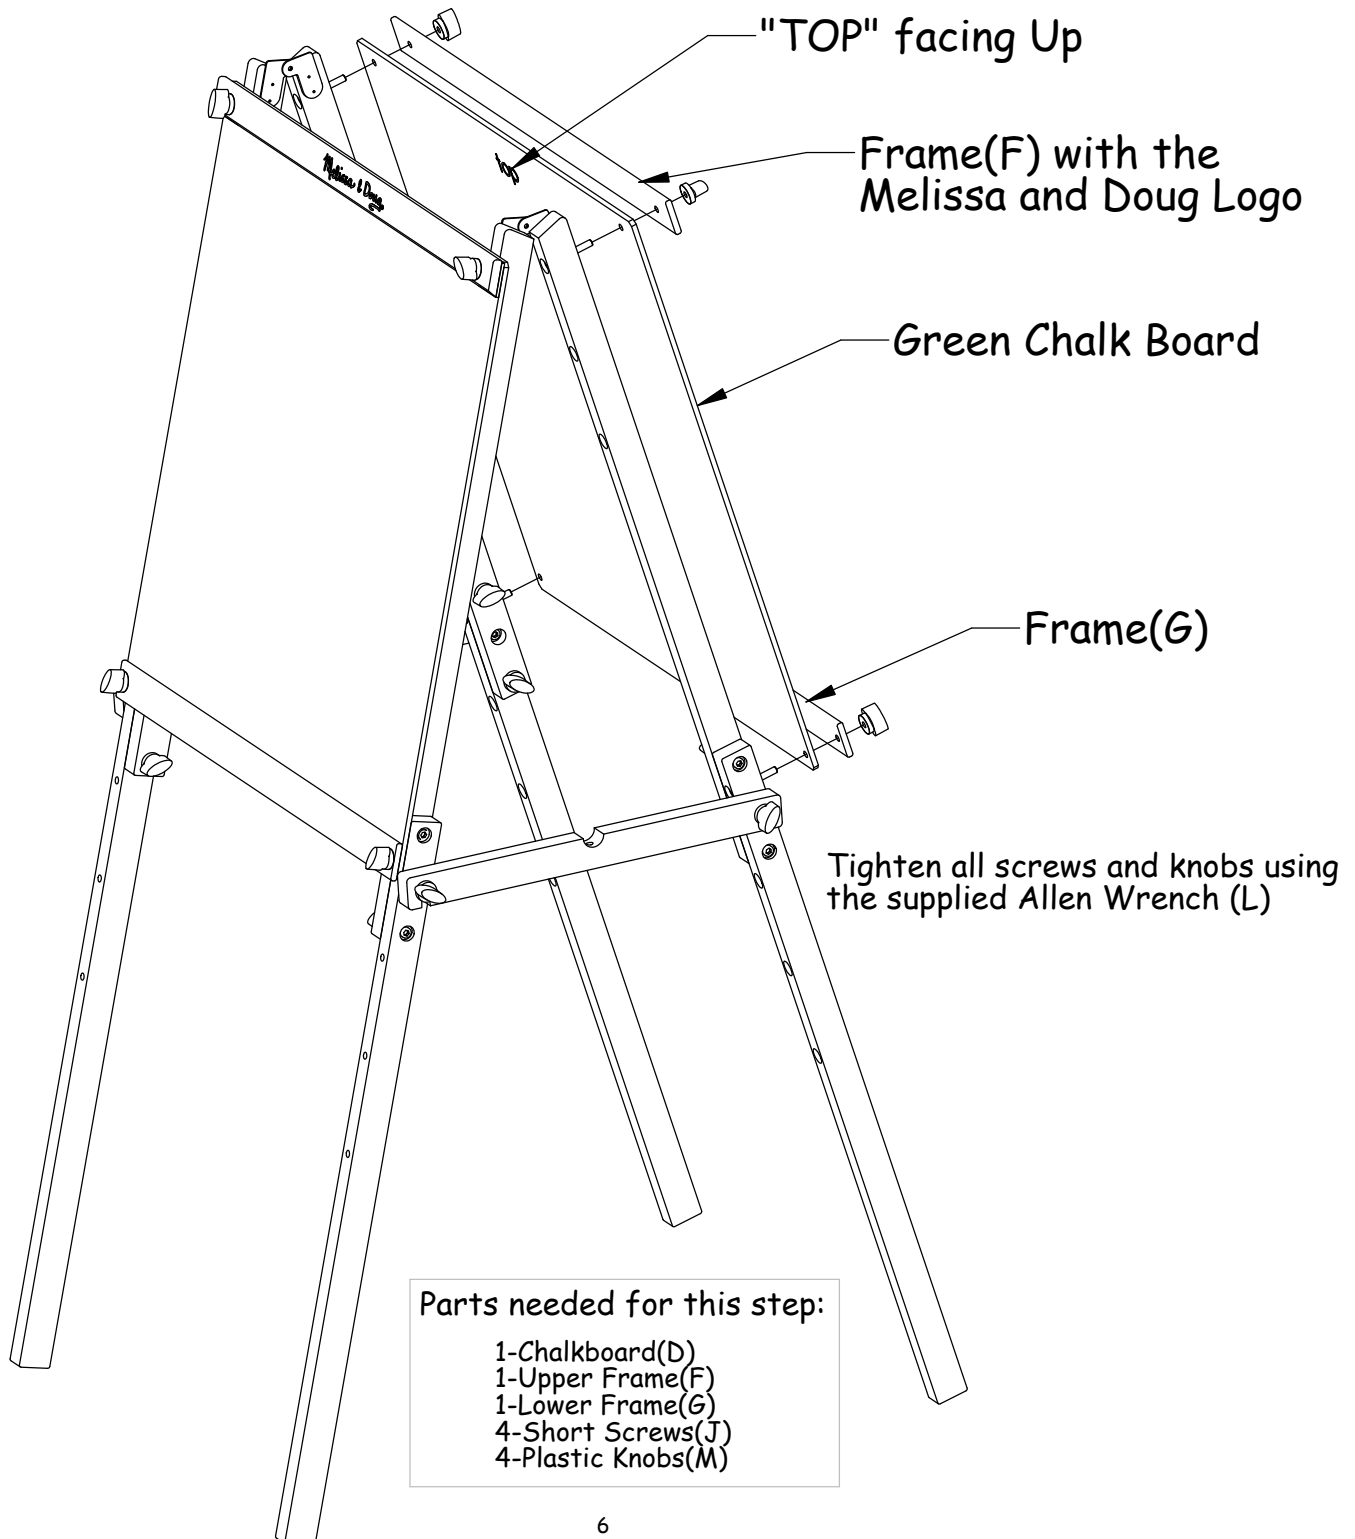


# Deluxe Standing Art Easel

## STEP 5

Attach the Paper Roll Dowel (I) to the side braces using 2 Short Screws (J) and 2 Colored Knobs (M) as shown below. Attach the Blue Tray (O) and the Red Tray (P) as shown using 2 Short Screws (J) and 2 colored Knobs (M) for each Tray.

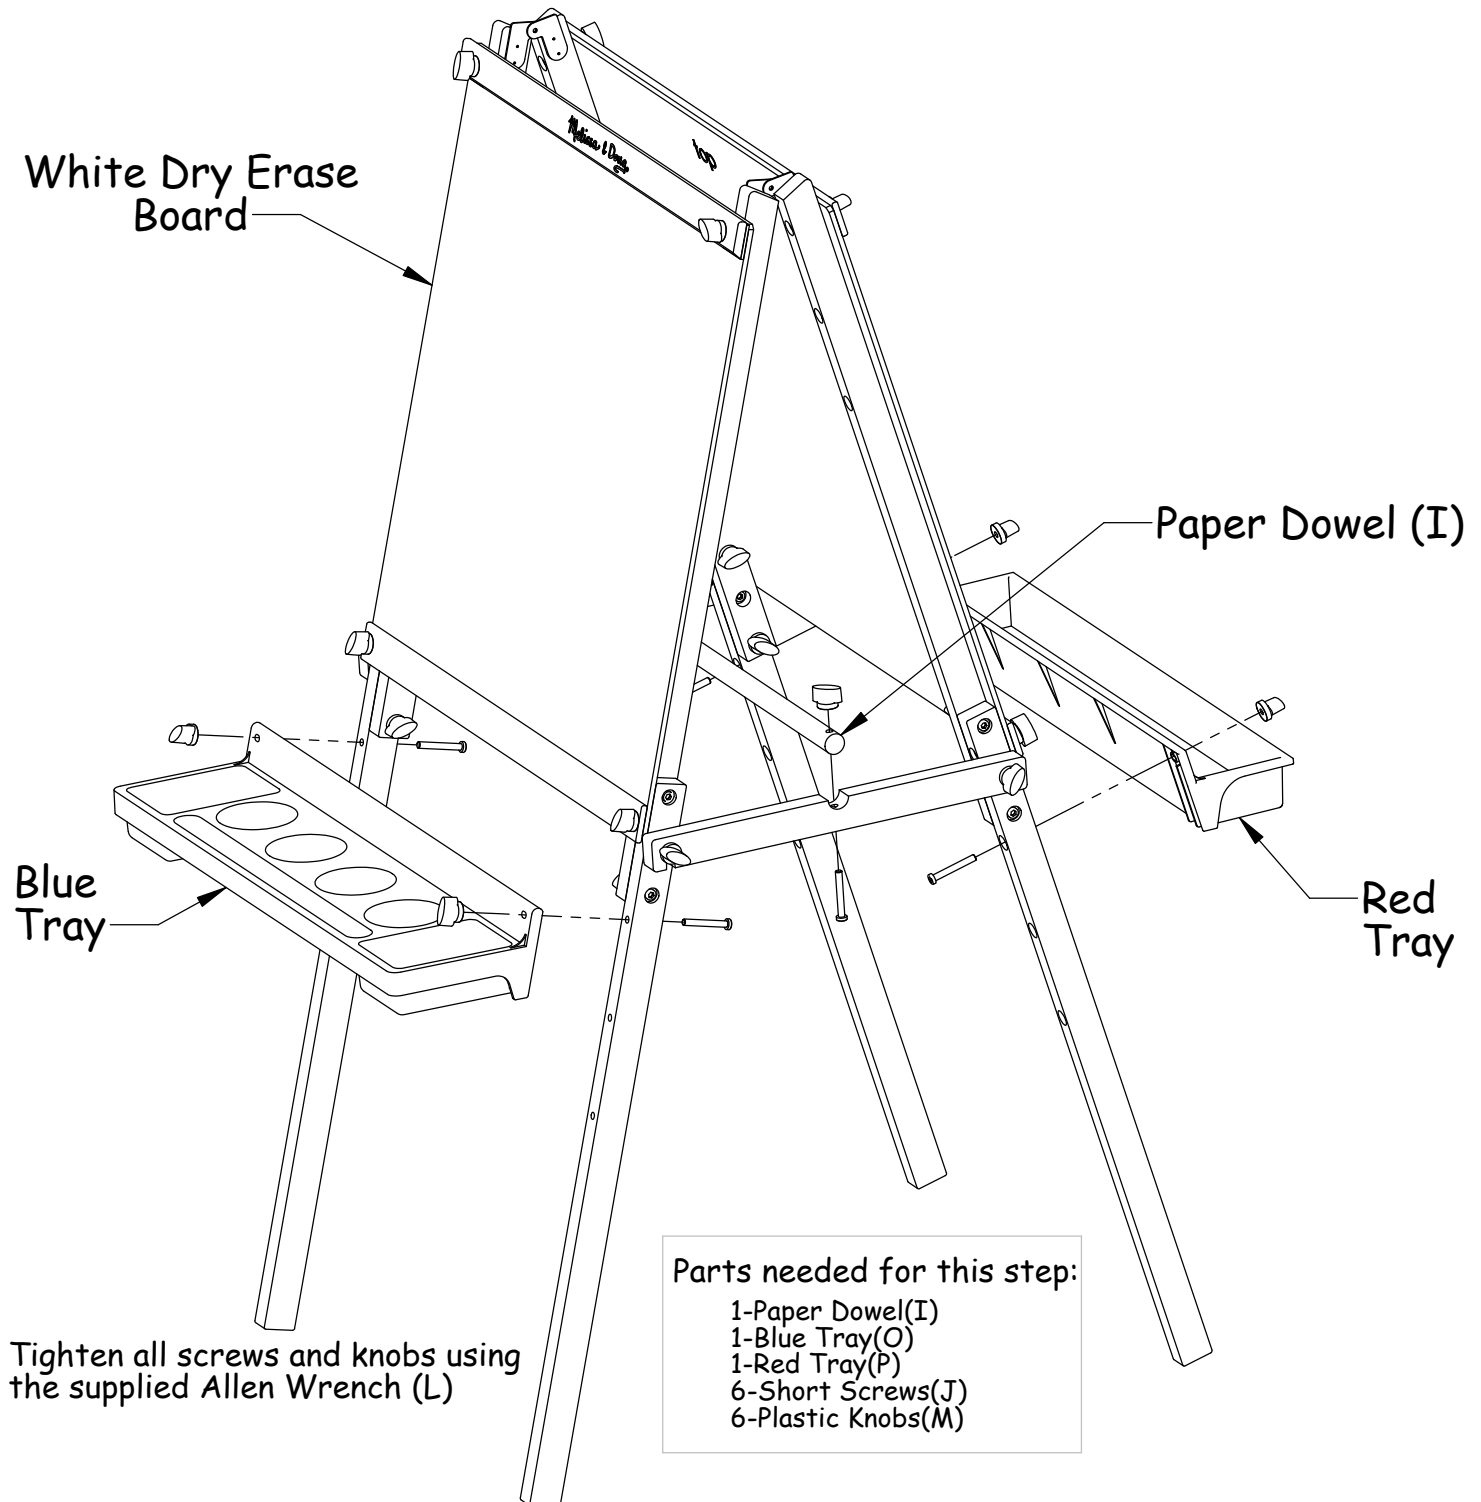

# Deluxe Standing Art Easel

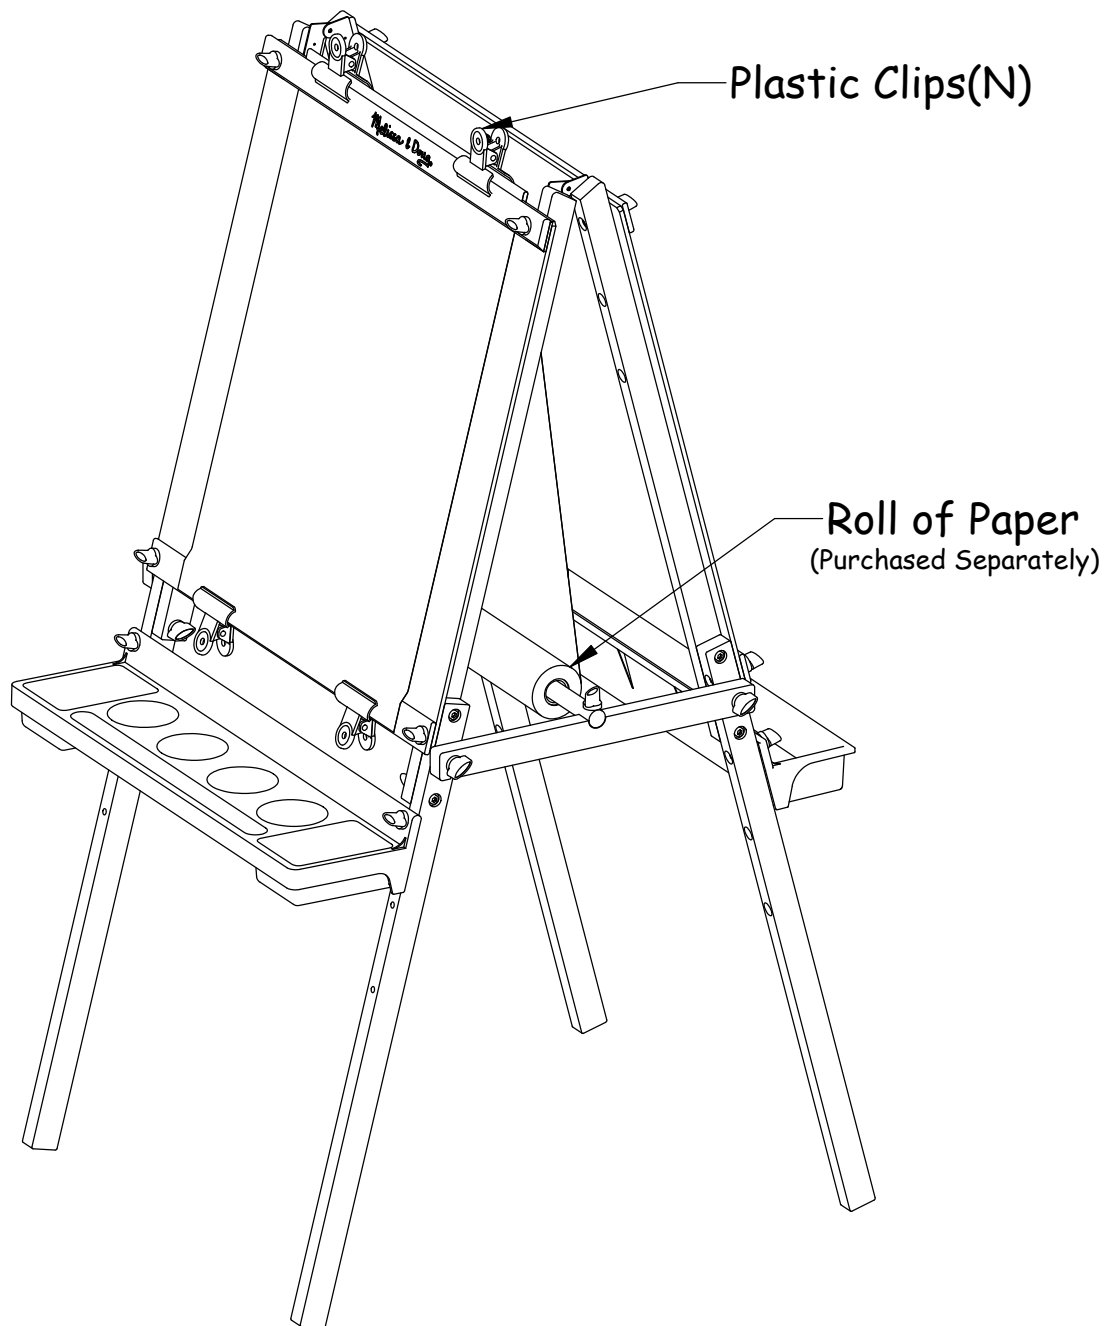

The assembled Easel is shown here with a roll of paper held in place with the 4 plastic clips on the White Dry Erase Board.

Choose Melissa and Doug art supplies to use with your new Deluxe Art Easel. The #4145 Easel Accessory Set has everything your child needs to get started.

## Dry Erase Board Tips -

Make sure you use markers that are specially formulated for use on dry erase surfaces. Do not use permanent markers or you will damage the dry erase surface. Clean the board with a felt eraser or dry paper towel.