





# PRO STEEL REGULATION HOCKEY NET

72 in. / 1,82 m

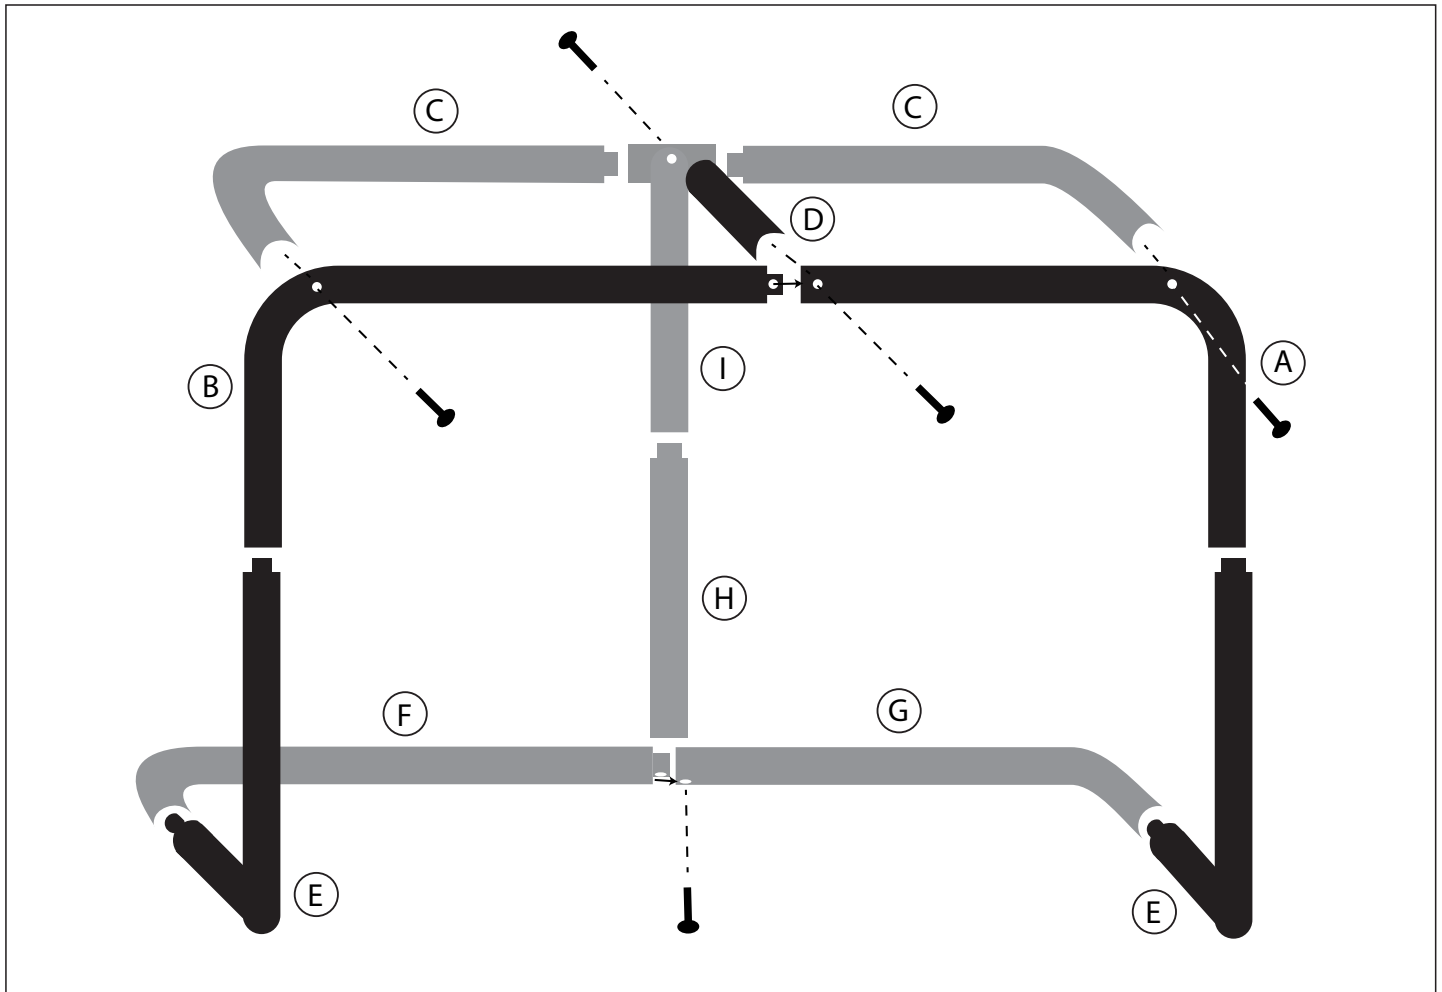

1. Remove all parts from packaging and carefully remove pipe plugs without damaging the pipe openings.
  2. Begin by gathering parts (A) - (I).
  3. Ensure you have enough room to begin the assembly (10 ft x 5 ft)
  4. Begin the assembly from the base and work your way to the top.
  5. Refer to diagram for instruction
- (\*Note: Connections may fit snug so if necessary use a rubber mallet)

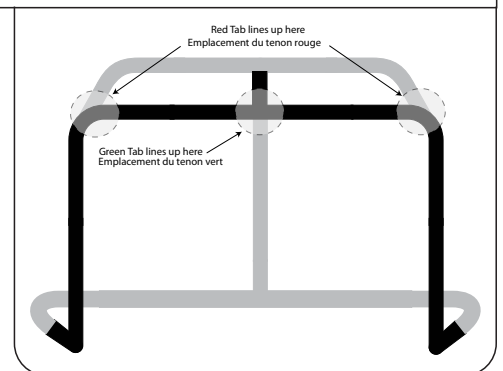

1. Sortez toutes les pièces de l'emballage et retirez soigneusement les bouchons des barres du but, en veillant à ne pas en endommager l'ouverture.
  2. Dans un premier temps, réunissez toutes les pièces de (A) à (I).
  3. Assurez-vous de disposer de suffisamment d'espace pour pouvoir entreprendre le montage (10 pi x 5 pi).
  4. Commencez par assembler les éléments de la base du but, puis continuez progressivement vers le haut.
  5. Reportez-vous à l'illustration pour plus de précisions.
- (\*Remarque : les pièces de raccord peuvent être étroites. Par conséquent, utilisez un maillet en caoutchouc en cas de besoin.)

Position the mesh by lining the red tabs to the two top corners and secure with the "zip ties" provided.  
 Placer le filet en alignant les languettes rouges avec les deux coins supérieurs et faire tenir à l'aide des attaches fournies.

